



MANUAL DE USUARIO

1 DIN Android Multimedia

QuadCore | 2 Ghz | 32 Gb SSD

Manual de usuario **ES**

User manual **ENG**

Mirror link Wireless

* Compatible con Android e iOS



CONTENIDO

1.	Funciones del producto	2
2.	Interfaz de usuario	3
3.	Ajustes del sistema	5
4.	Ajustes de las fuentes del sistema	8
5.	Actualizar MCU y sistema	8
6.	Preguntas frecuentes	9



1. FUNCIONES DEL PRODUCTO

1. Reproducción de música: Soporta los siguientes formatos de audio: MP3 / WMA / APE / FLAC / WAV / AAC, etc.
2. Reproducción de video: Soporta los siguientes formatos de video: RM / RMVB / AVL / MOV / MWV / ASF / VOB / 3GP / MPEG, etc.
3. Búsqueda de imagen / Ampliación / reducción, soporta los formatos: JPG / JPEG / BMP / GIF / PNG, etc.
4. Radio/Bluetooth.
5. Entradas y salidas de Audio y video.
6. USB-IPOD (opcional).
7. Navegación GPS 3D integrados (opcional).
8. Soporta actualización de mapas online (opcional).
9. WIFI incorporado.
10. Soporta navegación por Internet 3G. (opcional).
11. Soporta navegación por Internet 4G. (opcional).
12. Soporta navegación por Internet compartiendo desde el móvil (WIFI hot spot).
13. Soporta USB, copia de archivos desde USB, lectura y escritura.
14. Soporta instalación de alrededor de 200,000 Android apps.
15. MSN, Skype, Gmail, Twitter, Facebook, y Blogs
16. Soporta televisión Digital DVBT-HD (módulo opcional).
17. Soporta conexión a DVR (opcional).
18. Soporta TMPS (opcional).
19. Soporta OBD (opcional).

ESPECIFICACIONES

Voltaje de operación: DC 12V
Rango admisible: 10.8V ~ 16V
Consumo máximo: 10A
Rango de temperatura: -20°C ~ +70°C

2. USO DE LA INTERFAZ

 
Esta sección contiene instrucciones de la localización de los controles y operaciones básicas que encontramos en la sección principal.

1. Salir
2. Menú
3. Últimas funciones
4. Atrás
5. Navegación
6. Radio
7. Música
8. Bluetooth
9. Vídeo
10. Aplicaciones



2.1 RADIO

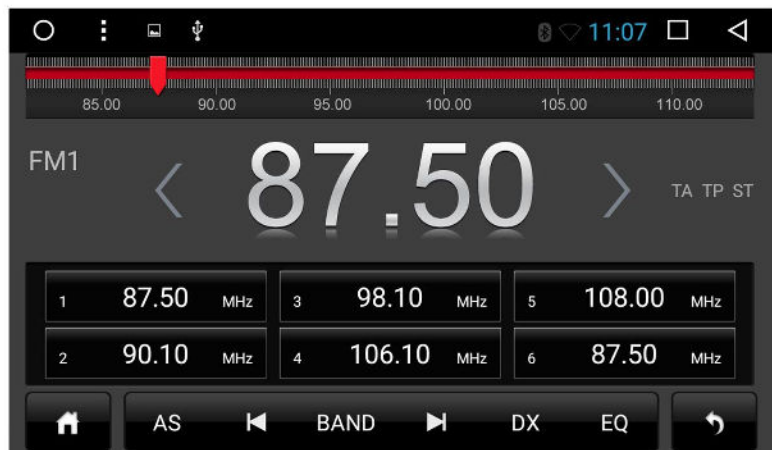


Esta sección contiene instrucciones de localización de los controles y operaciones básicas para navegar por el modo 'Radio'.




NO.	FUNCIÓN	NO.	FUNCIÓN
○	Menú principal	AS	Búsqueda y memoria auto.
◀	Retroceso	DX	Local/DX
BAND	Banda, FM1, FM2, AM	EQ	Ajustes de audio
▶	Avance	◀	Atrás
TA	Anuncio de tráfico	AF	Frecuencias alternativas
PTY	Tipo de programa	REG	Regional

2.2 Bluetooth

 Emparejamiento:

- MODO 1: Pulse  y después  para ver los dispositivos bluetooth disponibles, seleccione el dispositivo que desee emparejar e introduzca la clave '1234' en el teléfono cuando lo solicite, se iluminará el símbolo .
 - Modo 2: Encienda el Bluetooth del teléfono y seleccione 'V900 nevus', busque en la lista 'Evus 570A' e introduzca el código '1234'
- La conexión será completa cuando aparezca el nombre del dispositivo en la lista.



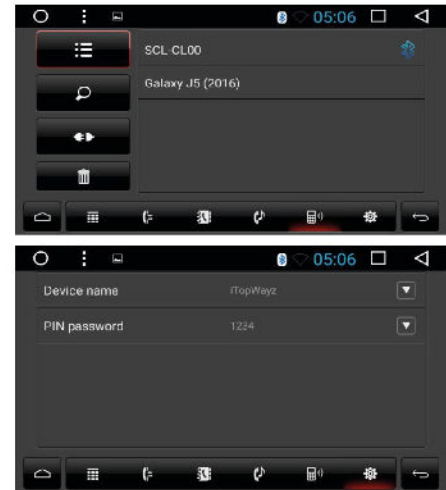  



 
NO.	FUNCIÓN	NO.	FUNCIÓN
	Lista de dispositivos		Teclado numérico
	Buscar dispositivos		Registro de llamadas
	Desconectar		Descargar agenda
	Borrar dispositivo		Reproductor de música
	Abandonar la búsqueda		Ajustes de bluetooth



2.3 Reproductor de música

Pulse  o seleccione el icono 'Música' → 
 En la pantalla del reproductor puede seleccionar, USB, e INand (Memoria interna).



 



 


NO.	FUNCIÓN	NO.	FUNCIÓN
	Play / Pausa		Equalizador
	Siguiente		Aleatorio
	Anterior		Repetir
			USB


2.4 Reproducción de video

Pulse  o seleccione la aplicación → 
 En la pantalla del reproductor puede seleccionar USB e INand (Memoria interna)




NO.	FUNCIÓN	NO.	FUNCIÓN
	Play / Pausa		Ampliar
	Siguiente		Avance rápido
	Anterior		Retrosceso rápido
			USB

 2.5 Ajustes del ecualizador

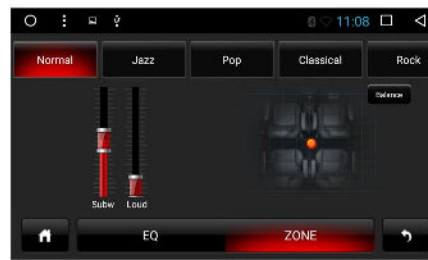

3. AJUSTES DEL SISTEMA

 
3.1 Acceso directo al menú superior

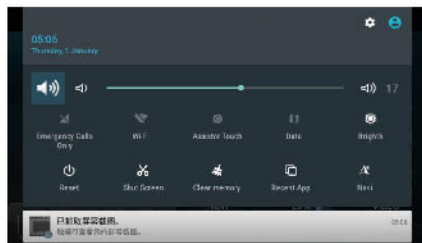


NO.	FUNCIÓN	NO.	FUNCIÓN
	Control de vídeo		Captura de pantalla
	Apagado		Limpiar memoria
	WiFi (On / Off)		Establecer elemento de inicio NAVI
	Aplicaciones recientes		

3.2 WiFi / Punto de acceso WiFi

 Seleccione 'Ajustes' → 'WiFi' → 'Si' → 'Seleccione dispositivo' → 'Introduzca contraseña' → 'Conectar'.

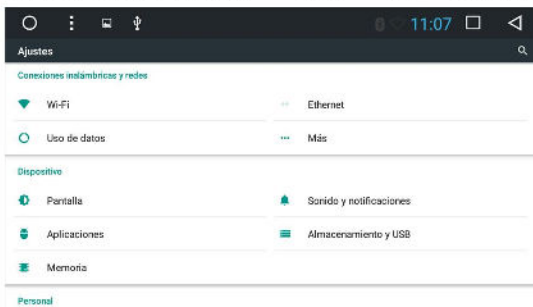

 
Seleccione 'Ajustes' → 'Más' → 'Compartir internet y zona WiFi' → 'Si' → 'Ajuste contraseña'.

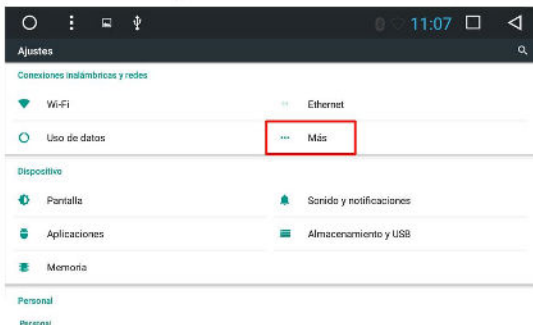


Nota: Configure el punto de acceso WI-FI después del enlace WI-FI o 3G


3.3 Red 3G

3G Soportados							
1	Huawei EM770	Huawei EM770W	Huawei E160	Huawei EM750	InnoComm (1001)	ZTE MF220	ZTE MF210
2	Huawei E261	Huawei E1750	Alcatel X220E	ZD (6000)	ZTE MF190	Qualcom (9603)	Qualcom m(0003)
3	ZTE MF190S	ZD (7000)	Qualcom (9013)	Huawei E180	InnoComm (0020)		


Uso del 3G : Apague la unidad y conecte el dongle 3G, Aproximadamente 10 seg. tras reiniciar aparecerá automáticamente el icono indicando el nivel de señal 


3.4 ES - Buscar / Copiar archivos

 Pulse  seleccione local /usb /, mantenga pulsado para seleccionar el archivo deseado, utilice los iconos de la barra lateral para copiar / cortar / pegar etc.

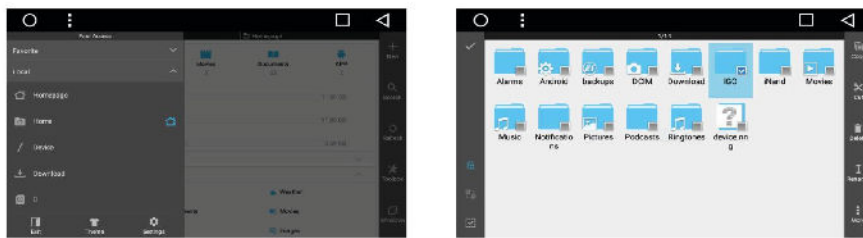

3.5 ES - Buscar / Copiar archivos de mapas

 
Pulse  seleccione / local/ usb /, mantenga pulsado para seleccionar el archivo deseado, utilice los iconos de la barra lateral para copiar / cortar / pegar etc.

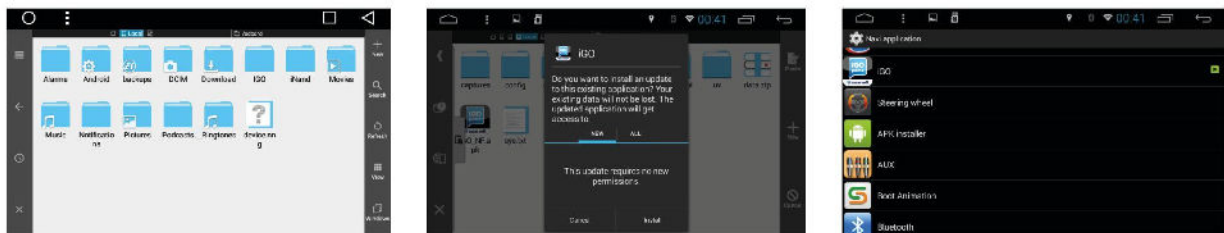


3.6 Descarga de aplicaciones.

Pulse  para entrar en la tienda Android, seleccione la aplicación que desee instalar y siga las instrucciones.


3.7 Desinstalar aplicaciones.


Pulse , luego mantenga pulsada la aplicación a desinstalar por más de tres segundos, Arrastre el icono a la papelera en la parte superior izquierda de la pantalla para desinstalar.

 Seleccione 'Aplicaciones' → 'Ajustes' → 'Aplicaciones' → 'Forzar detención' → 'Desinstalar'.

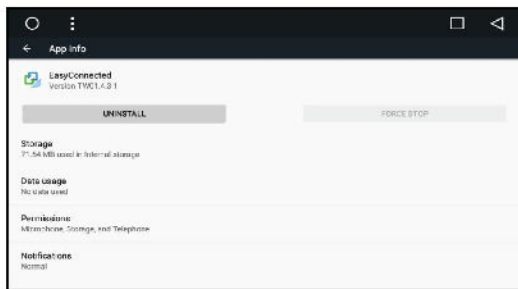

3.8 Control de mandos al volante.

Pulse , entra en el menú de aprendizaje :

- Pulse .
- Seleccione una función deseada de la tabla.
- Pulse la tecla correspondiente del volante.
- Repita los pasos 'B' y 'C' con el resto de funciones.
- Pulse **[END]** para finalizar.

Nota: Puede borrar los ajustes pulsando 

VOL+(R)	VOL-(R)	MUTE	MODE
HOME	MENU	BACK	NEXT
PREV	ANSWER	POWER	NAVI
RADIO	EJECT	BUTTON	DISC
RESERVE	RESERVE	RESERVE	RESERVE
START	RESERVE	RESERVE	CLEAR

4. AJUSTE DE LAS FUNCIONES DEL SISTEMA

4.1 Seleccionar región de radio.

 
4.2 Ajuste del freno de mano.

4.3 Sistema de radio.

4.4 Ajuste de iluminación del panel.

4.5 Force USB1.1

4.6 Ajuste del LOGO.


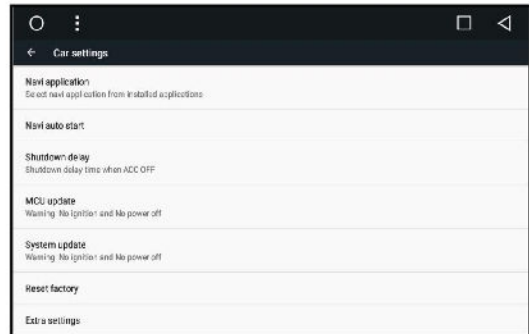


Ruta de ajuste: 'Aplicación' → 'Ajustes' → 'General' → 'Ajustes avanzados' → '123456' → 'OK'

5. ACTUALIZACIÓN SISTEMA / MCU UPDATE


5.1 Actualización del sistema

  Ajustes → General → Ajustes coche → Actualización de Sistema → OK

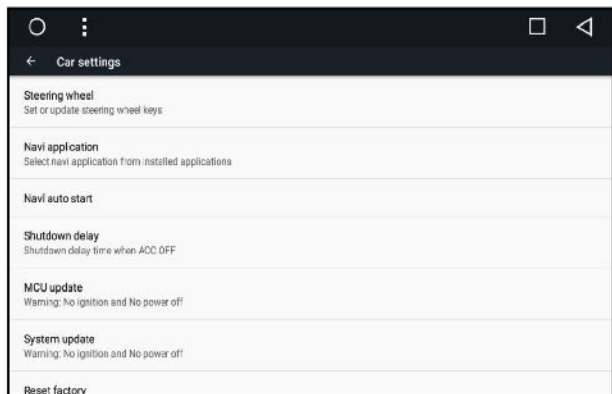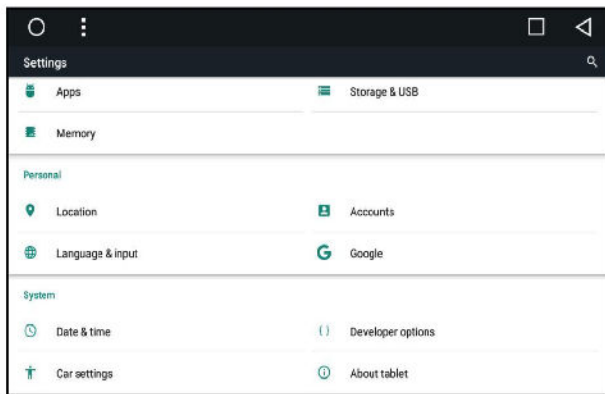

5.1 Actualización MCU

 Ajustes → General → Ajustes coche → Actualización MCU → OK

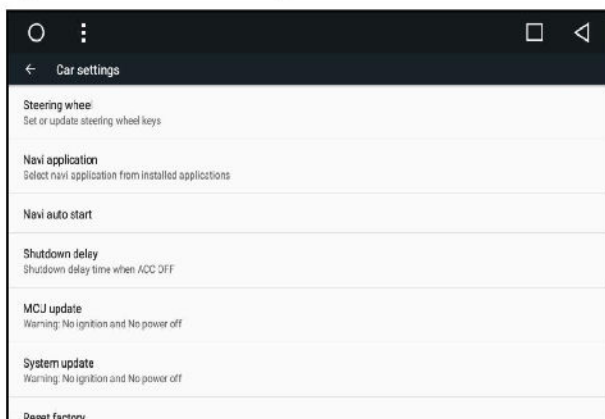

6. PREGUNTAS FRECUENTES

PREGUNTA	COMPRUEBE	SOLUCIÓN
LA UNIDAD NO ENCIENDE	1: Compruebe si recibe alimentación.	Compruebe el cable de alimentación.
	2: Compruebe el fusible.	Cambie el fusible, 15A.
	3: ¿La unidad está bloqueada?	Pulse el botón 'RESET'.
LA RADIO NO FUNCIONA	1 : Compruebe la antena	Verifique la antena y sus conexiones
	2 : Elija una emisora diferente	Verifique si se escucha correctamente
	3 : Verifique el ajuste "LOCAL"	Seleccione DX
	4 : Verifique la alimentación del amplificador de antena	Compruebe que el cable azul "Auto-Ant" está debidamente conectado
	5 : Compruebe > ajustes > zona de radio	Seleccione "Europa"
EL GPS NO FUNCIONA	1 : Problema en el mapa	Reinstale los mapas
	2 : Datos de mapa corruptos	Reinstale los mapas
	3 : Los mapas expiraron	Instale nuevos mapas
	4 : Sin señal GPS	Verifique si la antena está conectada
	5 : Compruebe la antena	
	6 : Compruebe la ubicación de la antena	Partes metálicas del vehículo pueden interferir en la señal.
APLICACIONES NO FUNCIONAN	1 : Fallo en el sistema, anormal influencia de otras aplicaciones instaladas, virus.	Restablezca los valores de fábrica, way; setting-common-restore factory settings -password7890
	2 : Memoria insuficiente	Cierre o desinstale algunas aplicaciones
SIN CONEXIÓN A INTERNET	1 : Dongle 3G incompatible	1 : Dongle 3G incompatible
	2 : WIFI apagado	2 : WIFI apagado
	3 : Contraseña WIFI incorrecta	3 : Contraseña WIFI incorrecta
	4 : El arranque no reconoce	4 : Apagar y colocar en modo 3G o WIFI
	5 : No se puede enlazar a Internet desde el hot spot de teléfono	5 : Compruebe la antena

CONTENTS

1.	Product function	11
2.	Operation of UI	12
3.	Operation of system settings	14
4.	Set system function	17
5.	Update MCU and system	17
6.	Frequently Asked Question	18



1. PRODUCT FUNCTION

1. Music play: Support full audio format .MP3/WMA/APE/FLAC/WAV/AAC etc.
2. Video play: Support full video format. RM/RMVB/AVL/MOV/MWV/ASF/VOB/3GP/MPEG, etc.
3. Image browse/enlargement/shrink, support format JPG/JPEG/BMP/GIF/PNG, etc.
4. Radio / Bluetooth.
5. Audio and Video output/input.
6. USB-IPOD(optional).
7. Built-in GPS and 3D navigation (optional).
8. Support real-online map update.
9. Built-in WiFi.
10. Support 3G internet surf. (optional).
11. Support 4G internet surf. (optional).
12. Support surf via mobile phone as WIFI hot spot.
13. Support , U disk, USB file copy, reading and running.
14. Support download, install and delete over 200,000 Android apps.
15. Built-in MSN, Skype, Gmail, Twitter, Facebook, QQ, Blogs and etc.
16. Support Digital TV (optional).
17. Support link to DVR (optional).
18. Support TMPS (optional).
19. Support OBD (optional)..

SPECIFICATION

Operating voltage: DC 12V

Operating voltage range: 10.8V ~ 16V

Maximum operating current: 10A

Maximum operating temperature: -20 °C~+70 °C

2. UI OPERATION

This section contains instructions for locating the basic controls and operations found in the main section.

The screenshot shows the main interface with the following elements and their corresponding callout numbers:

- 1. Exit to Menu (top left circle icon)
- 2. Menu (top left vertical ellipsis icon)
- 3. Browsing history (top right square icon)
- 4. Back (top right triangle icon)
- 5. Navigation (bottom left paper plane icon)
- 6. Radio (bottom second radio icon)
- 7. Music Play (bottom third music icon)
- 8. Bluetooth (bottom fourth Bluetooth icon)
- 9. Video (bottom fifth play button icon)
- 10. App page (bottom sixth gear icon)

2.1 RADIO

This section contains instructions for locating the controls and basic operations for navigating in the 'Radio' mode.

The screenshot shows the Radio mode interface with the following elements:




- Frequency display: 87.50 MHz (FM1)
- Frequency range: 85.00 to 110.00 MHz
- Frequency list:

1	87.50 MHz	3	98.10 MHz	5	108.00 MHz
2	90.10 MHz	4	106.10 MHz	6	87.50 MHz
- Control buttons: Home, AS, Search down, BAND, Search up, DX, EQ, Back

NO.	FUNCTION	NO.	FUNCTION
○	Main Menu	AS	Channel search and save
◀	Search down of radio	DX	Local/DX
BAND	FM1, FM2	EQ	Audio settings
▶	Search up of radio	◀	Back
TA	Traffic Announcement	AF	Alternative Frequencies
PTY	Program Type	REG	Regional Link

 









2.2 Bluetooth


Link to Hand phone :

· WAY 1 : click  get into Search Bluetooth, click  scan Bluetooth device, choose your hand phone name, and enter password "1234" in your phone, display Bluetooth device 



· WAY 2: Turn on a hand phone Bluetooth, select scan for device, find unit name 'Evus V900' link and enter password '1234'.

  The connection is successful when hand phone device name in Bluetooth connection list.


 


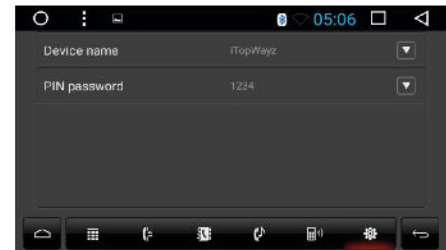


NO.	FUNCTION	NO.	FUNCTION
	Connection list		Phone dial
	Scan device		Phone mail list
	Disconnect		Download P-book
	Delete BT device		Music player
	Exit to scan		Set Bluetooth





2.3 Music Play

Click  or click Application →  into music player, click play music from USB play music from USB device, click iNand play music from unit.










NO.	FUNCTION	NO.	FUNCTION
	Pause / Play		EQ
	Last		Shuffle
	Next		Repeat
			USB device

 
2.4 Video display

Click  or click Application →  into video player, click USB play video from USB device, click iNand play unit video.




NO.	FUNCTION	NO.	FUNCTION
	Pause / Play		Maximize
	Last		Fast forward
	Next		Fast backward
			USB device

 2.5 Setting EQ

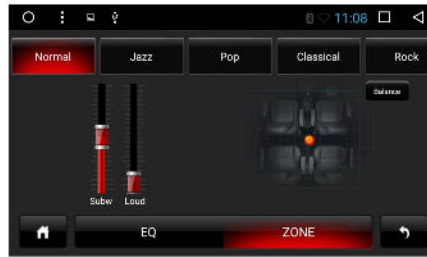

3. OPERATION OF SYSTEM SETTINGS

 
3.1 The top menu shortcuts

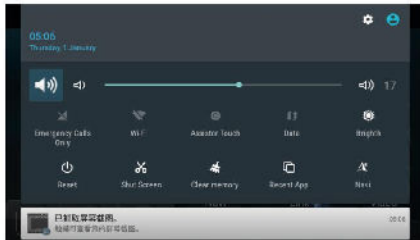


NO.	FUNCTION	NO.	FUNCTION
	Brightness control		Screenshot
	Power off.		Clear cached
	WiFi (On / Off)		Set NAVI startup item
	Recent App		

3.2 WiFi / WiFi hotspot

 Press 'Settings' → 'WiFi' → 'On' → 'Selective network' → 'Password' → 'Connect'.

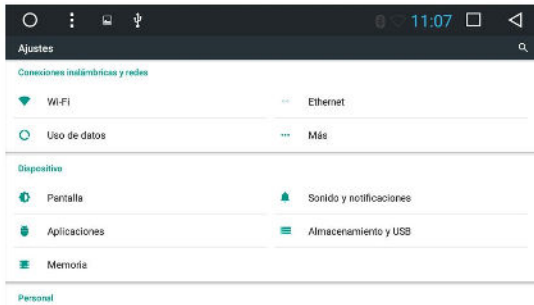

 Press 'Settings' → 'More' → 'Tethering & Portable hotspot' → 'Open' → 'Settings Hotspot'.

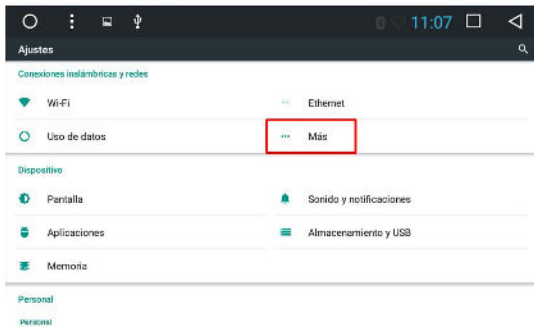

Remark: Setting Wi-Fi hot spot after link WIFI or 3G.


3.3 3G Network



Support 3G							
1	Huawei EM770	Huawei EM770W	Huawei E160	Huawei EM750	InnoComm (1001)	ZTE MF220	ZTE MF210
2	Huawei E261	Huawei E1750	Alcatel X220E	ZD (6000)	ZTE MF190	Qualcom (9603)	Qualcom m(0003)
3	ZTE MF190S	ZD (7000)	Qualcom (9013)	Huawei E180	InnoComm (0020)		

3G usage:

Turn off unit and use 3G Dongle, auto connect after start 10s and display 3G signal logo 



3.4 ES file browser \ Copy file

  Click  into system file, press local / (local/usb0), long time press a file, use copy or cut; Paste: press favorite/switch to menu and paste you copy or cut file.

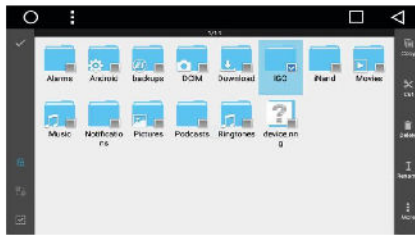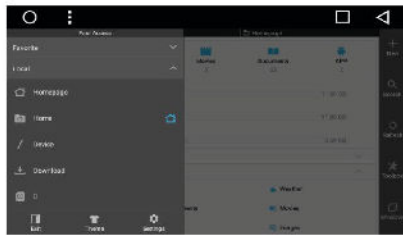

3.5 ES file browser \ Copy map

  
Click  into system file, press local / (local/usb0), long time press NAVI file (IGO Careland NaviOne....), use copy or cut a file;

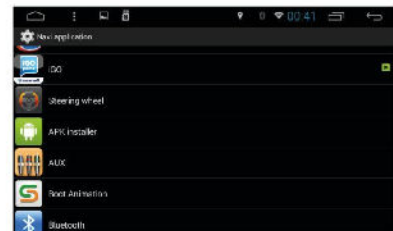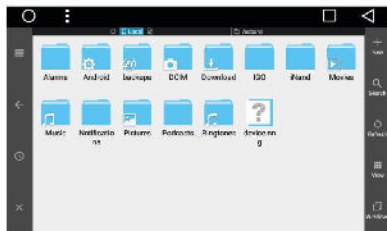


3.6 APP Download

Click  into Android Market, select download APP.


3.7 Uninstall APP


Click  into Application, press on a APP file 3 seconds, drag to trash the upper left of the screen to determine of uninstall.

 Click 'Applications' → 'Settings' → 'Apps' → 'Uninstall and force stop'.

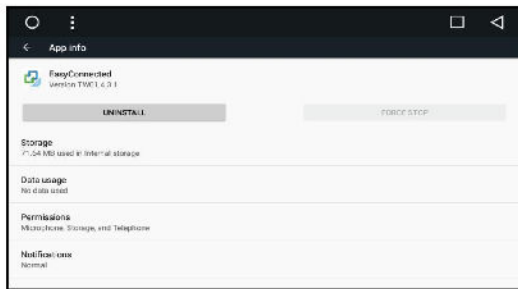

3.8 Steering wheel control

Click  into Key function learning :

- A. Press on 
- B. Select the function you need.
- C. Click you wheel key.
- D. Return step 'B' and 'C' to setting other function of steering wheel.
- E. Press on **[START]** setting will end.

Remark: If you need relearn steering wheel function,

click  return step a-b-c.

A screenshot of a steering wheel control function learning screen. It shows a grid of 16 buttons arranged in 4 rows and 4 columns. The top status bar shows the time as 00:54. The buttons are: Row 1: VOL+(R), VOL-(R), MUTE, MODE; Row 2: HOME, MENU, BACK, NEXT; Row 3: PREV, ANSWER, POWER, NAVI; Row 4: RADIO, EJECT, BUTTON, DISC; Row 5: RESERVE, RESERVE, RESERVE, RESERVE; Row 6: START, RESERVE, RESERVE, CLEAR.

4. SET SYSTEM FUNCTION

4.1 Select radio region.

 
4.2 Brake setting.

4.3 Radio system.

4.4 Panel light setting.

4.5 Force USB 1.1

4.6 Logo settings.

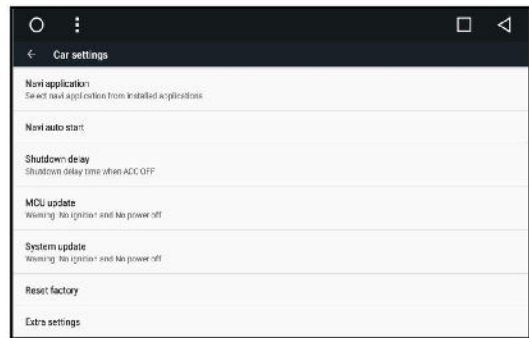


Settings path: 'Application' → 'Settings' → 'General' → 'Extended settings' → '123456' → 'OK'

5. SYSTEM / MCU UPDATE


5.1 Update System

 'Settings' → 'General' → 'Cars settings' → 'System Update' → OK

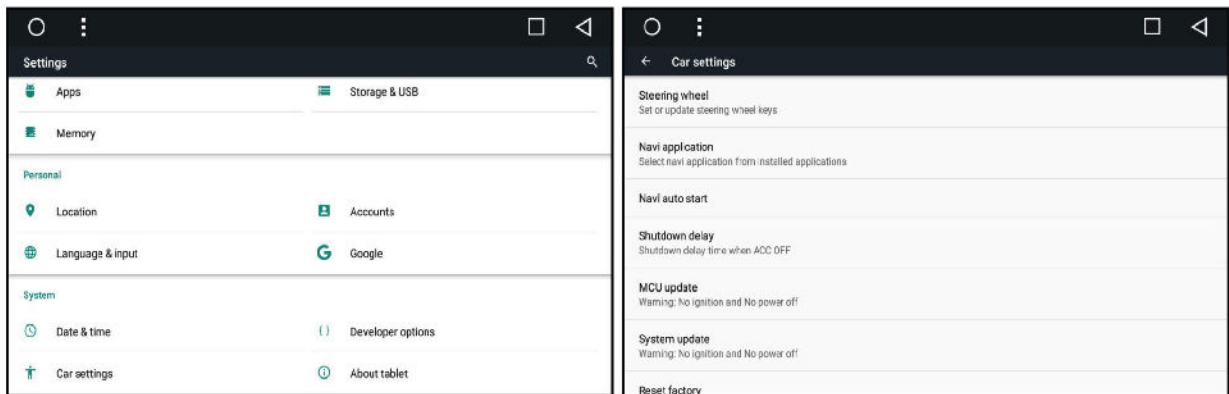

5.1 Update MCU

 'Application' → 'Settings' → 'Car setting' → 'MCU update' → 'OK'

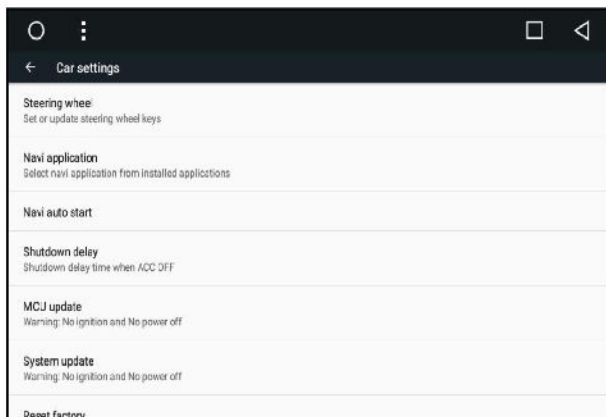

6. FAQ

QUESTION	SOLUTION	REPAIR
CAN NOT START	1: Check the power wire.	Refer to (link of power wire).
	2: Check power fuse is off or burned.	Change a 15A fuse.
	3: The reset button to check whether there is lose.	Press on 'RESET'.
RADIO WITHOUT WORK	1: Check radio antenna is normal.	The radio antenna install in.
	2: Choose a radio station and whether the sound normal.	Check for proper listening.
	3: Use LOC and DX scan.	Set DX.
	4: ISO power wire and wire P. ANT wire and original radio wire link.	Check that the blue "Auto-Ant" cable is properly connected.
	5: check the scan area.	Choice your area range.
NAVI WITHOUT WORK	1: Map problem.	Uninstall map and install again.
	2: Map data broken.	Install NAVI map again.
	3: Map use of expired.	Install NAVI map again.
	4: GPS no signal.	Check if the antenna is connected.
	5: Check GPS antenna .	Install GPS antenna.
	6: Rearrange GPS antenna.	Put GPS antenna the seat.
APP CAN NOT WORK	1: System crash, abnormal cause of third party softwar and viruses.	Restore factory settings, way; setting-common-restore factory settings-password7890
	2: Not enough memory .	End of some APP
CAN NOT LINK TO INTERNET	1: 3G DONGLE no supply.	Reference '3G supply list'.
	2: WIFI not turn on.	Settings→'WIFI and Internet'→WIFI ("√".)
	3: WiFi wrong password.	Check password.
	4: The boot does not recognize.	Power off and put in 3G or WiFi model.
	5: Can not link to internet from Phone hotspot.	Mobile phone set off sleep.





Ronda Narciso Monturiol,17 AS Center Rojo
46980 Paterna (Spain)
Tlf. +34 96 160 98 35
Email: service@evustech.com